 


Audionic®

The Sound Master

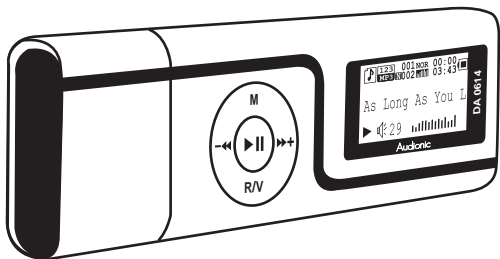

USER MANUAL





Important information

Observing the following safety information will help provide you with years of reliable and trouble-free service.

Retain and follow all product safety and operating instructions.

Observe all warnings on the product and in the operating instructions.

After reading these instructions, keep this document for future reference.

Caution:

You can increase the life of your product by taking the following precautions:

Before cleaning always disconnect the power line and all connection cables.

Do not use any solvents, caustic or gaseous cleaning agents.

Do not place any type of flammable object, such as a candle or a lamp, near the device.

Ensure that no water droplets remain on the screen. Water can cause permanent discoloration.

Do not expose the screen to bright sunlight or ultraviolet radiation.

Do not charge this product where the temperature is below 0°C or above 40°C and when exposed to direct sunlight or moisture.

Use only approved peripheral devices and accessories with your device.

Refer to the documentation that came with the peripheral device/accessory for proper installation and usage.

Clean the display with a soft, lint-free cloth.

Repair:

Do not attempt to repair this product yourself! Do not open or remove the covers! This may expose you to dangerous voltage points or other risks.

Refer all repairs to Dany Warranty Support and engendering Staff.

Should a repair be necessary, please contact DANY customer care center or Call (+92-21) 111-000-170

Disposal instructions:

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle.

Table of Contents

Know Your Device	05
How to Use the Player	07
Switching on & off	08
Main Menu	08
Music	08
Record	11
Voice	11
System	12
Other Options	12
Specifications	16
Pricing	16
Availability	17
Warranty	17

Know your device

Congratulations for choosing Audionic digital MP3 player. We make promise that you can enjoy your journey with audionic MP3 players. Audionic have a wide range of MP3 players with variety of features and shapes.

Package contents:

Please check the contents of the package. It should include this:

- Audionic MP3 Player
- Users' Manual
- Charger
- Catalog
- CD
- Earphones


Features:

MP3 Player (Walkman)



The player is the newest generation walkman which supports the music formats such as MP1, MP2, MP3, WMA and WAV.

Data Carrier

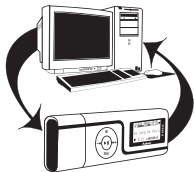

This Player can also be used as a USB Flash Disk.

FM Radio



You can enjoy the stereo FM tune is this player.

FM & Voice Recording




Record your favorite programs from FM. Built-in high-sensitive microphone for voice recording. Record more than 250 hours (in 1GB).

Song Sharing




Dual earphones jack enables you to share the voice with other.

Rechargeable Battery

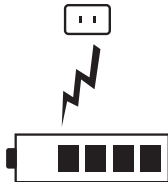

Almost 8 hours battery backup to entertain you more.

How to use the Player?

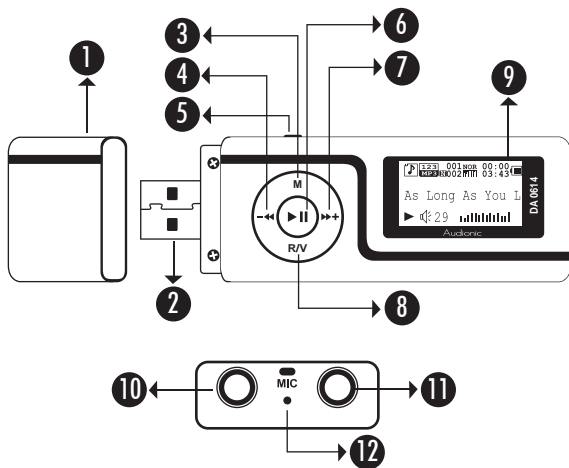

- 1) USB cap
- 2) USB connector
- 3) Mode (M)
- 4) Backward (-<<)
- 5) Power on/off
- 6) Play (>||)
- 7) Forward (>>+)
- 8) Volume (R/V)
- 9) Screen
- 10) Audio Jack 1
- 11) Audio Jack 2
- 12) MIC

Switching on & off:

Switch ON (5) the power button

ON: Press "PLAY (▶||)" button long, the player is on and enter the last working mode while switching off.

MAIN MENU

MUSIC:


Put MP3 songs in the device from computer.

Different contents available in main menu. Through pressing right or left key, you can see different contents of main menu.




Select Music by pressing "M" Mode button.

Select music from Left (←◀) and Right (▶→) button and Play (▶||) button to start / pause. Press R/V Key to set the volume.

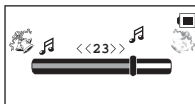

Adjust volume by left (←◀) and right (▶→) key.

Press mode (M) key to enter in the submenu.

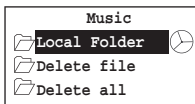


Above screen appears when you press the mode button while song is not playing, options available are:

- Local Folder
- Delete file
- Delete all

Through these options you can select or delete any audio file.

Press mode "M" button to select the different options of playing audio file. (During playback).


Repeat Mode:

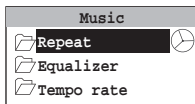

Normal	After the present song finishing continue to play the next song until finishing all the files and stopping.
Repeat one	Repeat one and one song.
Folder	Play all the songs in the files.
Repeat All	Repeat playing all the music in the files.
Repeat Folder	Repeat playing all the music.
Random	Random play the present music in the files.
Intro	Play the present music before 10 seconds.

Press "◀◀" or "▶▶" to choose, and press mode "M" to confirm.

Music Effect Mode:

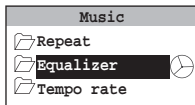


There are seven effect can be chosen:

- 1) Natural
- 2) Rock
- 3) Pop
- 4) Classical
- 5) Soft
- 6) Jazz
- 7) DBB

Press “◀◀” or “▶▶” to choose, and press mode “M” to confirm.


Play Speed:

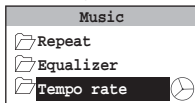


While playing music (its effective to MP3), it can be choose the different play speed (quickly or slowly), but its sound can't change . Poke the key “▶▶” to play quickly and stir “◀◀” to play slowly.

Notice: Refer to each song after speed setting until the next setting changing.

Replay:

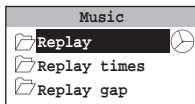


Fix and start to repeat playing between A-B to reach the repeat-reading mode, Press mode “M” key shortly to set the replay.

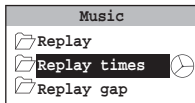


Press the key mode “M” to enter the repeat-reading frequency.

Press “◀◀” or “▶▶” to choose and press mode “M” to confirm

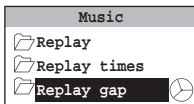

Press the key mode "M" to enter the distance of repeat-reading setting.
Press "▶▶+" or "◀◀-" to choose and press mode "M" to confirm

Exit:

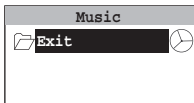


Select Exit and press mode "M" button to withdrawing interface
Press and hold mode "M" button for 5 seconds to return in main menu.

RECORD:




Shift to the voice recording, Enter in the menu by pressing mode "M" button
Press play (▶||) button to start , or Pause/stop. Hold the play (▶||) button for 5 sec to save the file. Recording will be always on until the memory is full if don't press the shutter key to stop.
Press and hold mode "M" button for 5 seconds to return in main menu.

Voice:

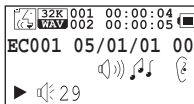

Shift to the voice , enter in the menu by pressing the mode "M" button.
Select the file by pressing left (◀◀) or right (▶▶) key. Press play (▶||) button to play / pause/ stop the file Hold the M button to exit from the menu

Deleting the recorded file:

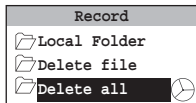


Enter in the sub menu of Voice by pressing the mode "M" button options available :

- 1) Local Folder
- 2) Delete
- 3) Delete All
- 4) Exit

Select the action by pressing left (←) and right (→) key, and execute by pressing mode "M" button.

Other options:

Play the file you want to listen. Press the mode "M" button to enter in the sub menu. The options available are :

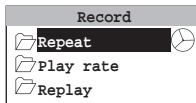


SYSTEM:




Choose the system settings in the main menu. Set the system parameters here and each choosing item is changed by the escalation of hardware. The parameters available in the system menu are :

Record Time:

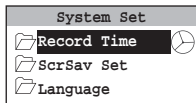


Set the date and time which record the files storing

Scrsav Set:

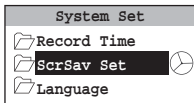

Set the screen savers.


Languages:

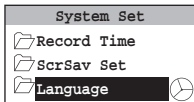

Set the different languages. Available languages:


- | | |
|------------------------|----------------|
| 1) Simple Chinese | 9) Spanish |
| 2) Traditional Chinese | 10) Swedish |
| 3) English | 11) Czech |
| 4) Japanese | 12) Dutch |
| 5) Korean | 13) Denmark |
| 6) erman | 14) Polish |
| 7) French | 15) Portuguese |
| 8) Italian | |

Power off:

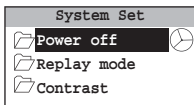


Set the clockwise time, when it reach the time , it can off automatically.

Replay Mode:

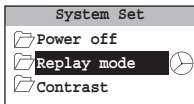


Set the working condition of repeating

Contrast:

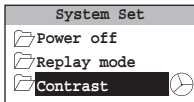


Set different contrast.

Memory info:

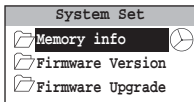


Check the memory status of the player

Firmware Version:

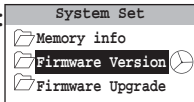

Display the hardware edition of the player

Firmware Upgrade:

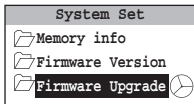


Professional for hardware upgrading.

Press and hold mode "M" button for 5 seconds to return in main menu.


OTHERS:

Tel Book:

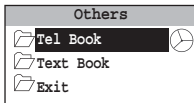


Choose the telephone book in the others option. Press the mode "M" button shortly to enter in the telephone directory mode. The browse tel option available through which you can browse the telephone numbers.

Text Book:

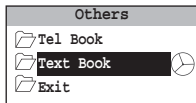

Choose the telephone book in the others option. Press the mode button shortly to enter in the telephone directory mode. You can see the text files you copied from the computer.

 Exit:




Select Exit and press mode "M" button to withdrawing interface. Press and hold mode "M" button for 5 seconds to return in main menu.

HOW TO CONNECT WITH YOUR PC:

Connect the device on USB port. Win XP/2000/Me/Vista automatically the device. Install driver for Win 98/NT.

Removable device will automatically appear in "My Computer" as windows detect the device. You can edit data easily.

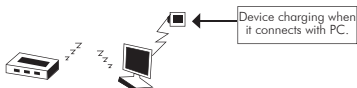

You can also charge the device through USB charger.

SPECIFICATIONS:

Built-In Memory: 1GB / 2GB / 4GB

Music Standard: MP1 / MP2 / MP3 / WMA / WMV

FM: 76MHz 96MHz / 87MHz - 108 MHz

FM Accuracy: 6db (100MHz)

LCD Display: 96*64 dot & Matrix

Languages: 15 Different Languages.

Power Source: 3.7V / Li battery

Interface: USB 1.1 (read: 1000K bytes, Write 800K bytes)

Recording Sample Rate: WAV (32kbps) ACT (8kbps)

Support Compact Speed Rate: MP3 (8kbps - 32 kbps) WMA, WMV, ASF, (5kbps - 384kbps)

Frequency Reaction: 20Hz - 20KHz

Lose True Rate: <0.1%

SNR: >8.5db

Transmitting Speed: 4 Mbps

Working Temperature: - 5 C to 40 C

Supporting System: Windows 98 / 2000 / ME / XP MC OS 10 ,
Linux 2.4.2


PRICING:

Audionic Travel Partner is

- More Useful
- More Economical
- Affordable for every individual

Availability:

All Pakistan DANY Dealers

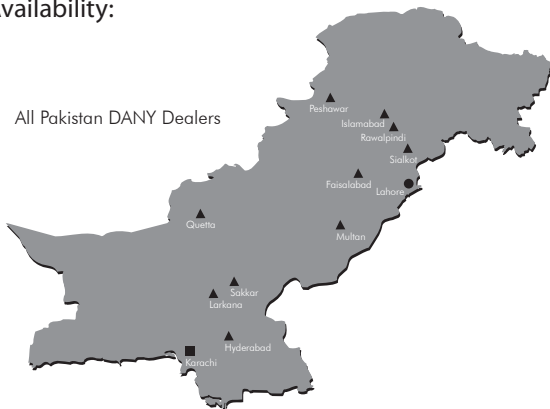

Warranty:



One-year warranty from the purchasing date
Company will provide free service or replacement

For More Information Contact:

www.danytech.com

021-111-000-170